Auto Openers AOTX


Programming Guide



Old Style AOTX



New Style AOTX

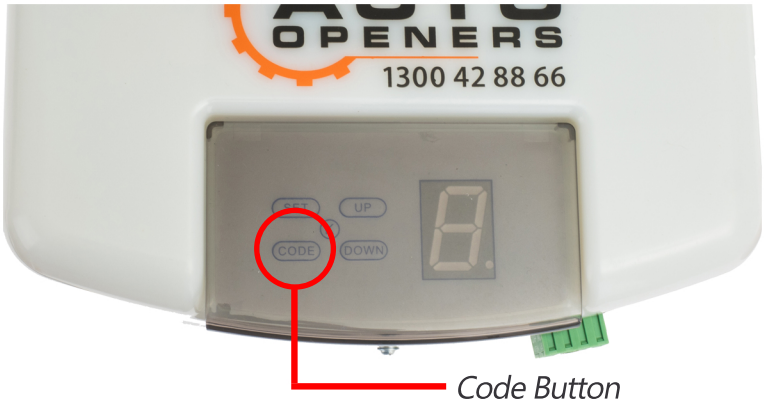

Programming Your Remote Control

1 Press and hold the Code button until the red LED at the bottom right of the screen iluminates, then release
2 Press the desired transmitter button for two seconds , then let go
3 Press down the same transmitter button for two seconds and then let go
4 The Red LED will flash, then extinguish
5 Test the operation of your new remote

Clearing The Codes From Your Motor

1 Press and hold the Code button for 8 seconds, or until the LED screen displays "C"
2 Release the Code button and test the operation of your remotes to check if remotes have been deleted
Please note, this will delete every remote control programmed into the opener

For technical support, see our website below.
Please have the model number of your remote control and garage / gate opener before calling.

www.ngro.com.au